


V, VV, VJR AIRBRUSH PARTS

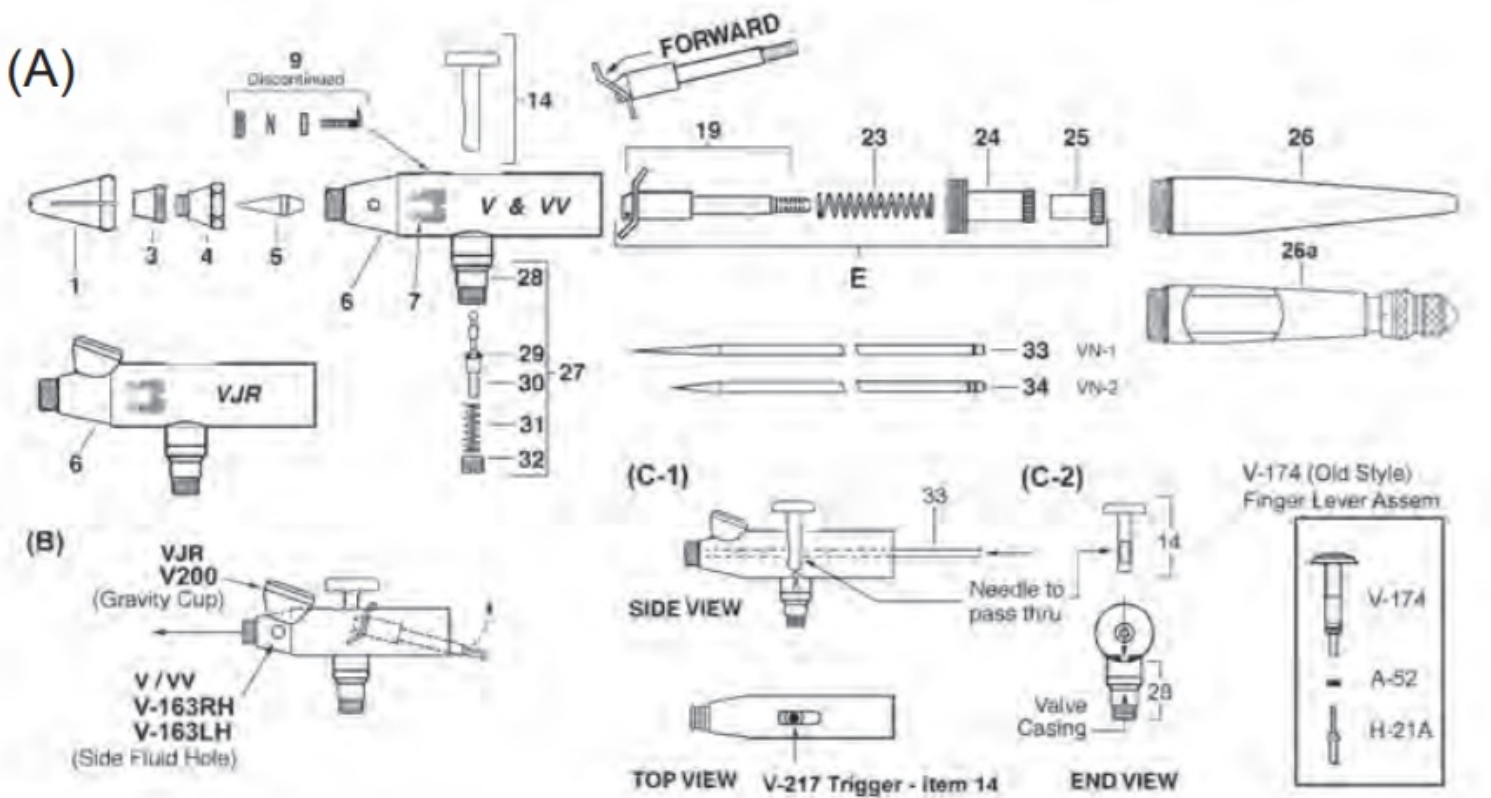

V, VV (Side Feed) & VJR (Gravity Feed) AIRBRUSH PARTS

NO	PART	DESCRIPTION			
1.	V-189	Head Protecting Cap	E.	V-186	Needle Valve Assem. L/Needle
4.	VB	Aircap Body	19.	V-191A	Rocker Assembly
3.	VM-1 or 2	Multiplehead (Select Size)	23.	V-140	Spring
3.	VA-1 or 2	Aircap (Select Size)	24.	V-136A	Needle Adjusting Sleeve
33-34.	VN-1 or 2	Needle	25.	V-141	Locknut
5.	VT-1 or 2	Tip (Select Size)	26.	F-143	Handle
6.	V-163RH	"V" Right Hand Shell Assembly	26a.	TAL-34	Handle & Stop Assembly (Optional) allows for preset paint flow
	V-163LH	"VV" Left Hand Shell Assembly	27.	V-221	Air Valve Assembly
	V-200	"VJR" (Cup in shell)Shell Assembly	28.	V-20	Valve Casing
	V-20	Valve CasingW/ above shells	29.	A-53	Valve 'O' Ring (pack of 6)
7.	V-218	PTFE Packing & Packing Nut (sold as set)	30.	VL-214	Valve Plunger (with A-53)
9.	V-175	Line Adjusting Assem. (discontued)	31.	A-22	Valve Spring
14.	V-217	Trigger	32.	A-23R	Air Valve Nut
			33.	VN-1	Needle
			34.	VN-2	Needle